

Wiring Installation Guide

ALM -	RJ45-1	BEEP
ALM +	RJ45-2	GLED
NC	RJ45-3	RLED
COM	RJ45-6	INWD0
NO		INWD1
BUT	WD0	GND
GND	WD1	+12V
SEN	GND	
BEL +	RXD	
BEL -	TXD	
	GND	
GND	485+	
+12V	485-	



ECO200D



ECO200S

