


Simple Installation Guide

ECOTP500

- GND
- 12VOUT
- GND
- BUT
- NO1
- COM1
- NC1
- +12V
- GND

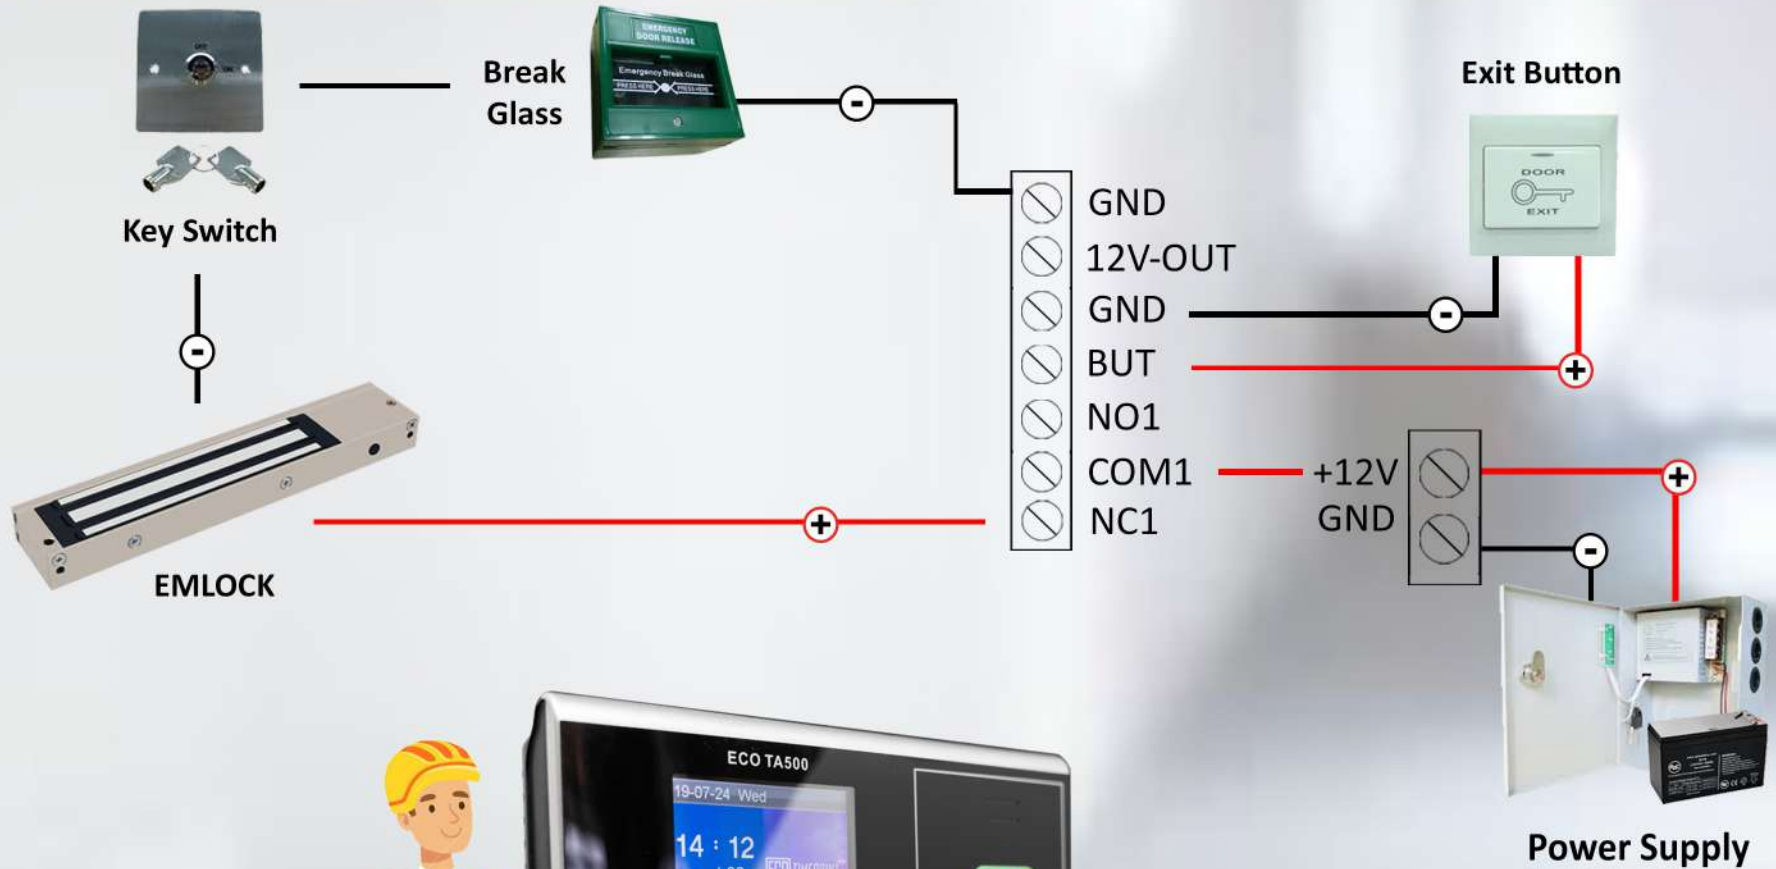

ECOTA500

