


Installation Guide

GND	DCIN	NC1	COM1	NO1	BUT	GND	SEN	AUX
NO	COM	NC	WDO0	WDO1	IWD0	IWD1	GND	+12V

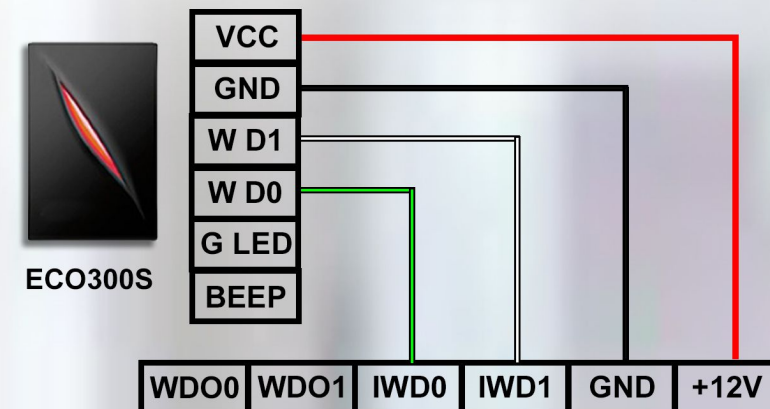

Power Supply



12V

GND

Exit Button



ECO301D

NO	NC	COM	+12V	GND	PUSH
----	----	-----	------	-----	------

NC1	COM1	NO1	BUT	GND	SEN	AUX
-----	------	-----	-----	-----	-----	-----



Key Switch



Break Glass



EMLOCK



ECO301D



TIMEPRINT

www.ecotimeprint.com