


ECO P2P USER GUIDE

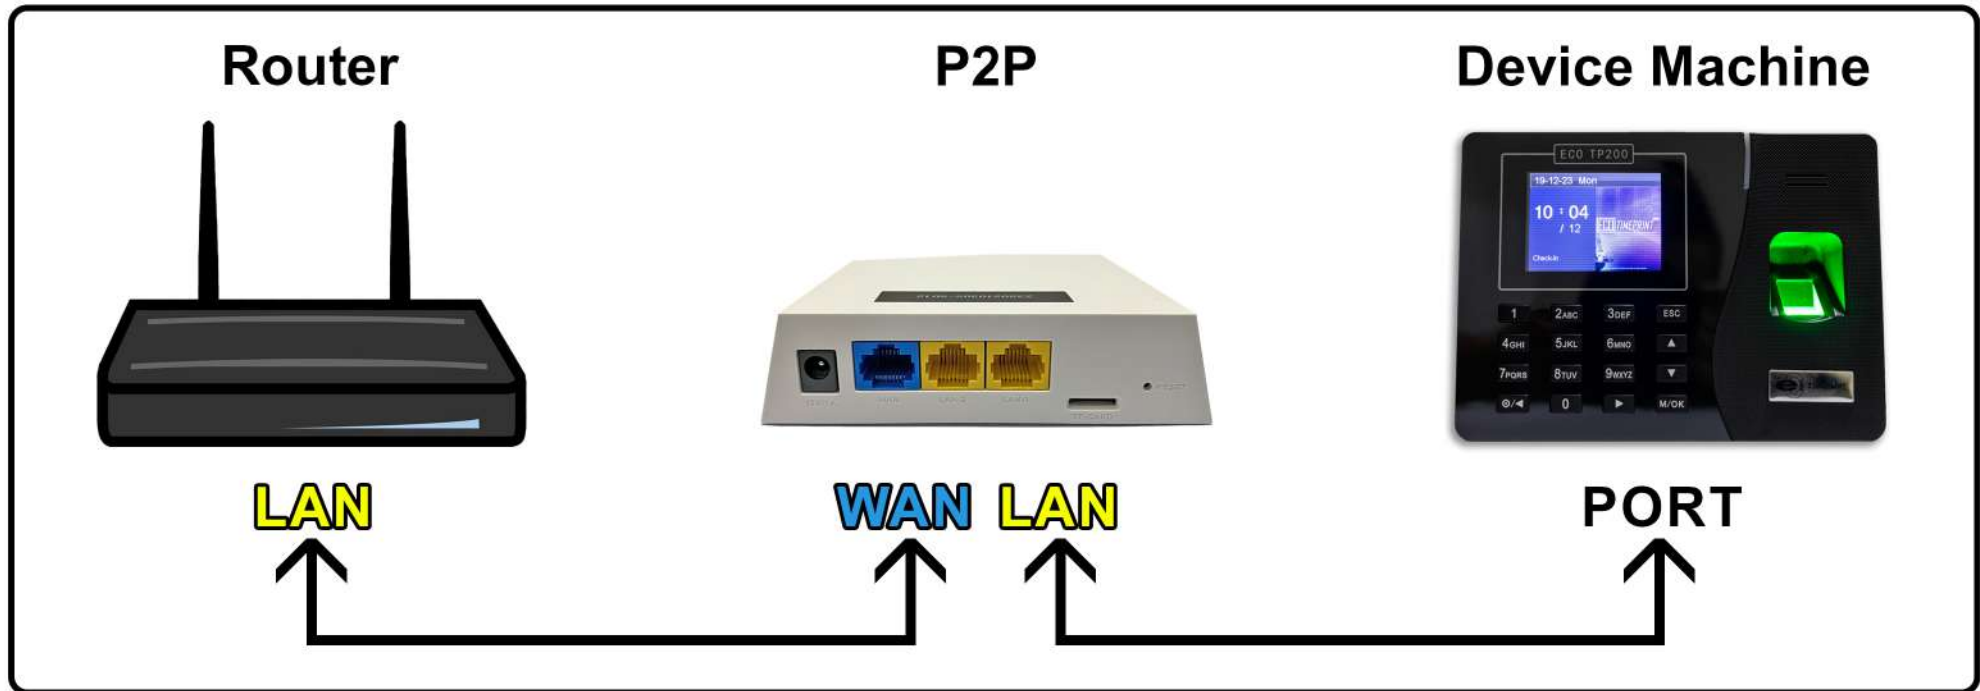

*Make sure the router network have access to internet

*The P2P default IP Address & Port will be labeled on the P2P router

1. Connect the network cable from *Router* LAN port to *P2P* WAN Port.
2. *P2P* LAN port connect to the *Device Machine* network port.
3. Make sure the IP Address range of the Device Machine is same as the P2P.
For example: If the IP address of P2P = 192.168.45.1 ,
then IP address of the Device Machine must be 192.168.45.x