

# ECO SF200 Pro

## Door Access Wiring Diagram



### LOCK

|     |        |     |       |
|-----|--------|-----|-------|
| NC  | Green  | GND | Black |
| COM | Purple | BUT | Gray  |
| NO  | Blue   | AUX | Brown |
| SEN | White  |     |       |


### WIEGAND

|          |        |
|----------|--------|
| WG0      | Green  |
| WG1      | Orange |
| GND      | Black  |
| +12V-OUT | Red    |

### RS485

|      |        |
|------|--------|
| 485A | Blue   |
| 485B | Yellow |
| GND  | Black  |


## Wiring Diagram with Power Supply

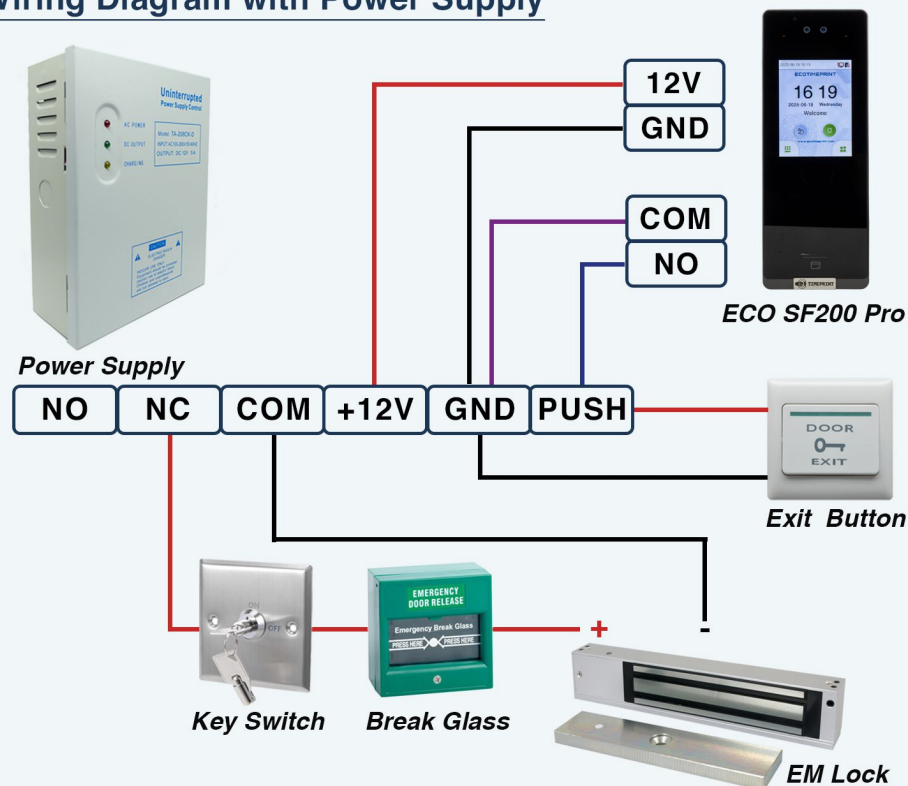

## Two Unit of ECO SF200 Pro Connection



ECO SF200 Pro

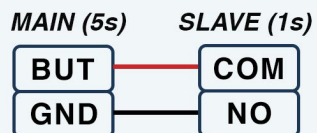

ECO SF200 Pro

Change the lock delay setting in  
Menu > Door Access > Door Lock Delay

## Wiring Diagram with ECO SF200 Pro

