




ECO SMARTFACE 200


485B
485A
WD0-OUT
INWD1
WD1-OUT
GND
INWD0
12V-OUT

NC
COM
NO
SEN
BUT
GND
AUX
GND
BELL+
BELL-
ALARM+
ALARM-

Wiring Diagram

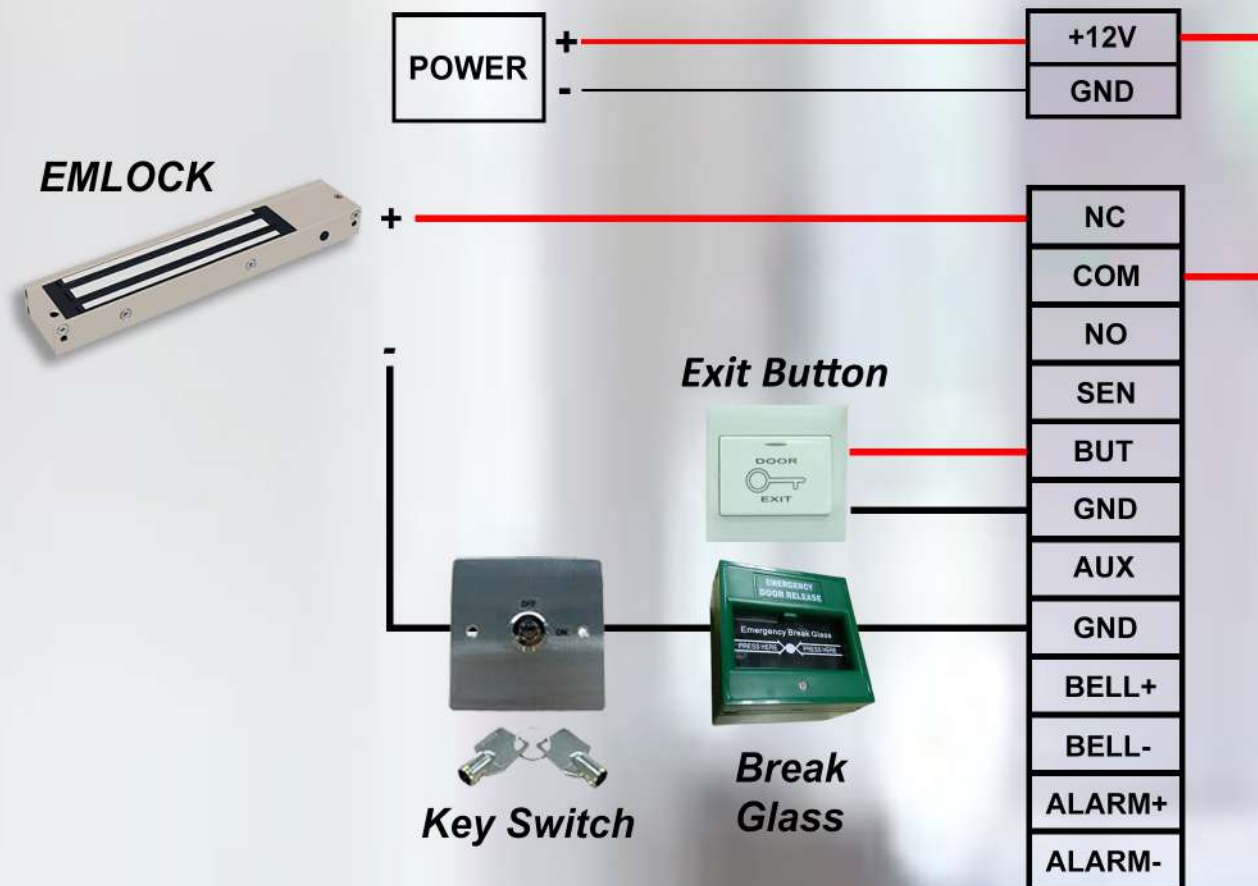

Slave Unit Connection

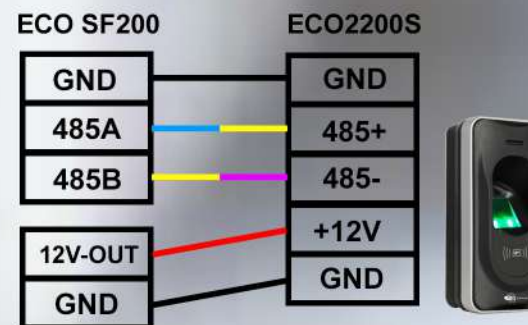

**Make sure main unit serial port is changed to master unit
Menu > Comm. > Serial Comm > Serial port change to master unit*



TIMEPRINT

www.ecotimeprint.com

Wiring Diagram

485B
485A
WD0-OUT
INWD1
WD1-OUT
GND
INWD0
12V-OUT

NC
COM
NO
SEN
BUT
GND
AUX
GND
BELL+
BELL-
ALARM+
ALARM-

Power Supply



Exit Button



Key Switch



Break Glass



EMLOCK



ECO SMARTFACE 200

NC	COM	NO	SEN	BUT	GND	AUX	GND	BELL+	BELL-	ALARM+	ALARM-
----	-----	----	-----	-----	-----	-----	-----	-------	-------	--------	--------

Slave Unit Connection

ECO SF200		ECO2200S
GND		GND
485A	—	485+
485B	—	485-
+12V	—	+12V
GND		GND



ECO SMARTFACE 200

*Make sure main unit serial port is changed to master unit
Menu > Comm. > Serial Comm > Serial port change to master unit