


Installation Guide

RJ45-1	485B
RJ45-2	485A
RJ45-3	GND
RJ45-6	TXD
	RXD
	GND
AUX	WD1
GND	WD0
/	
/	BEEP
SEN	GLED
GND	RLED
BUT	IWD1
NO1	IWD0
COM1	GND
NC1	+12V OUT
AL -	GND
AL+	+12V



ECO2200D

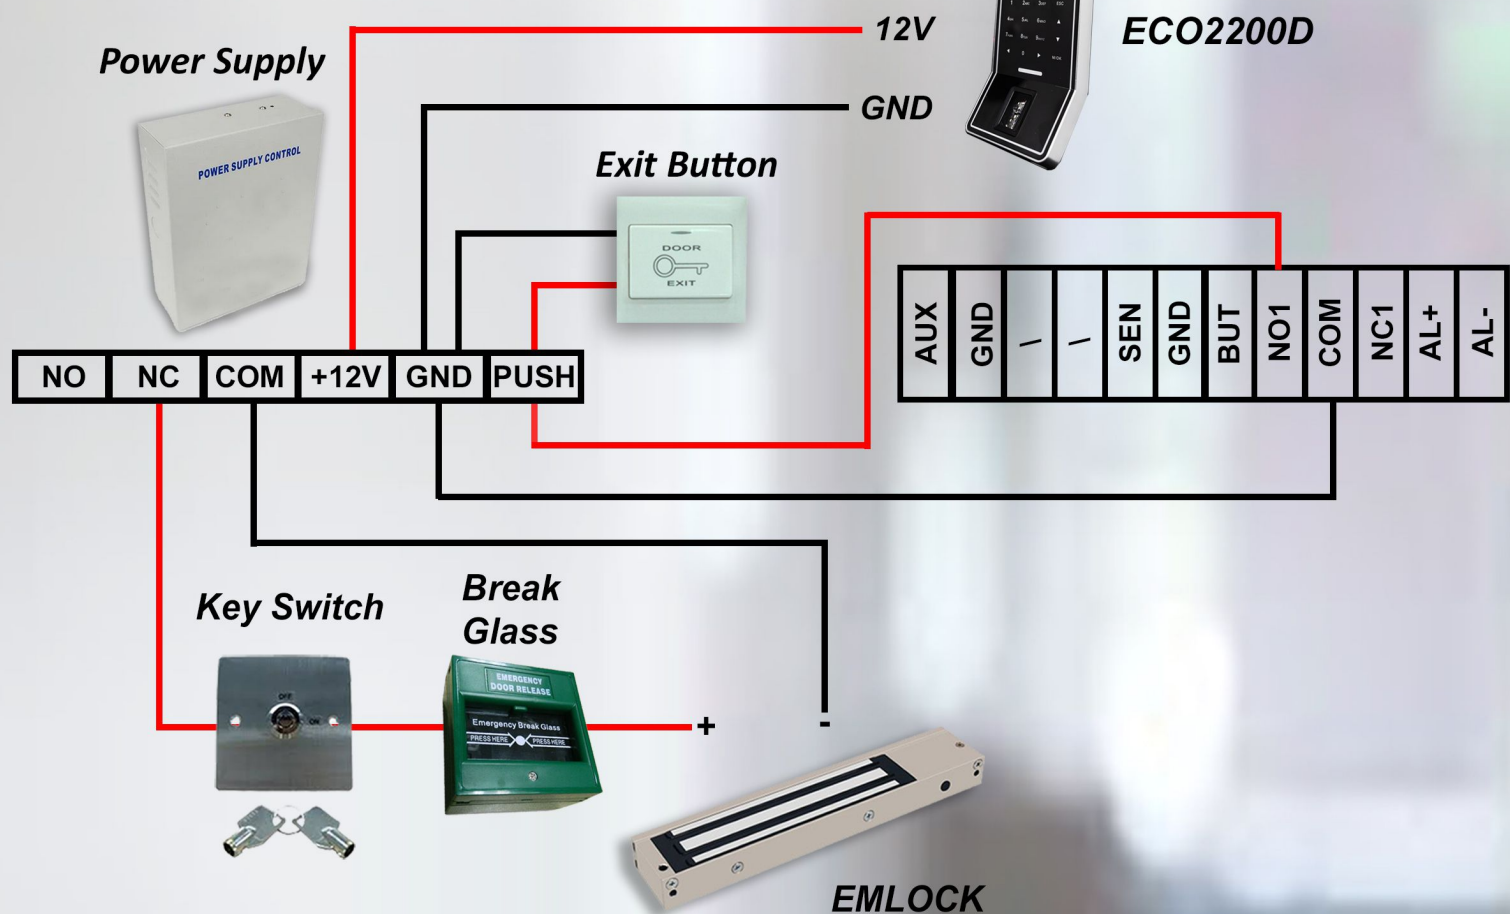

Slave Unit Connection

ECO 2200D	ECO2200S
GND	GND
485A	485+
485B	485-
+12V	+12V
GND	GND



**Make sure main unit serial port is changed to master unit
Menu > Comm. > Serial Comm > Serial port change to master unit*




TIMEPRINT

www.ecotimeprint.com

ECO2200D Wiring Diagram

RJ45-1	485B
RJ45-2	485A
RJ45-3	GND
RJ45-6	TXD
	RXD
	GND
	WD1
	WD0
AUX	BEEP
GND	GLED
/	RLED
/	IWD1
SEN	IWD0
GND	GND
BUT	+12V OUT
NO1	
COM1	GND
NC1	+12V
AL -	
AL+	

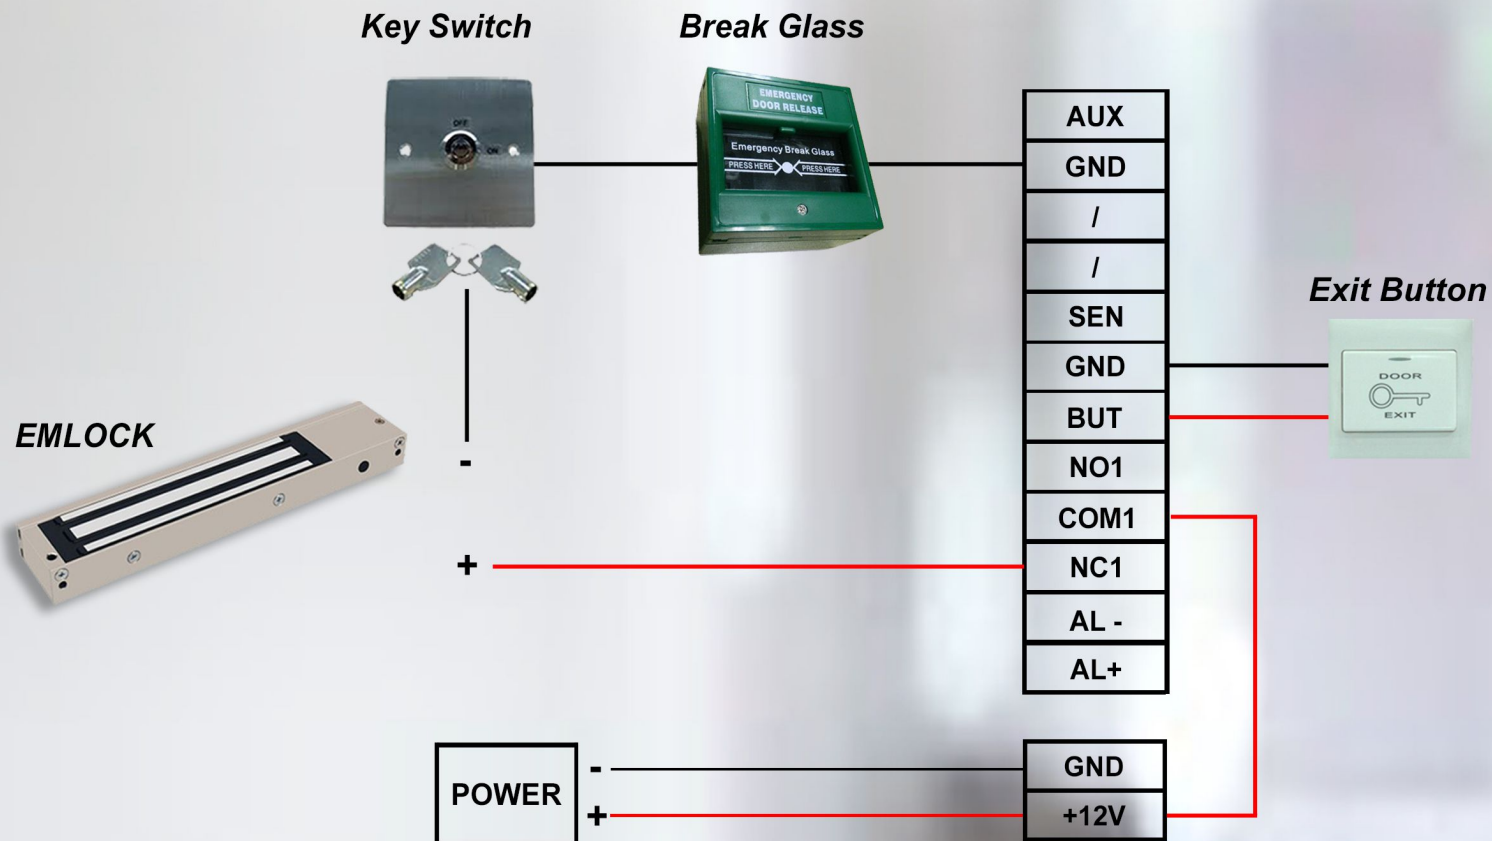

ECO2200D

Slave Unit Connection

ECO 2200D	ECO2200S
GND	GND
485A	485+
485B	485-
+12V	+12V
GND	GND



**Make sure main unit serial port is changed to master unit
Menu > Comm. > Serial Comm > Serial port change to master unit*



TIMEPRINT
www.ecotimeprint.com